



COTTON CANDY

MACHINE INSTRUCTIONS

- a) Always unscrew the stabilizer screws on the sides of the machine before beginning operation. Be sure to tighten the screws before transporting machine.
- b) Plug in the Cotton Candy Machine.
- c) Without turning the machine on, fill the floss head, about 80-90% full with floss-sugar. **DO NOT OVERFILL!** - Whenever you add floss-sugar to the floss head, fill it up to the end of the screw casing, which holds the head together. This is necessary to obtain a balanced condition in the floss head or excessive vibration will occur and the head will rotate 'wobbly'. **NEVER ADD FLOSS-SUGAR WHEN THE MACHINE MOTOR IS RUNNING**, After adding the floss-sugar, manually rotate head to balance. On the side of the floss-head are leather bands which require twisting to ensure the floss is being evenly distributed throughout the bowl.
- d) Flip the power switch and the heat switch to the 'on' position.
- e) Turn the heat control knob in the clock-wise position towards maximum setting, This setting will produce the fastest possible warm-up.
- f) The machine should begin to make cotton candy floss in a few seconds. When the unit gets up to heat. It will probably start to smoke. Just turn the heat control knob in the counter-clockwise direction to eliminate the smoking.
- g) Adjust the speed of the spin to an adequate setting - fast enough to get the floss going, but not up enough, to where you lose control.

CAUTION: Never operate this equipment for a prolonged period of time, with the heat control in a setting that causes the floss-sugar to smoke. This will result in excessive carbonization of the heat element ribbon. If you detect smoke or smell floss-sugar burning, reduce the heat immediately.

- h) Once, you find the ideal setting for the heat control, you should be able to operate near this setting, each time.
- i) Clean out the bowl before returning - empty any remaining floss-sugar out of the machine. **DO NOT PUT WATER INTO THE FLOSS-HEAD.**

A to Z Rentals & Special Events - 826 7th Ave - Huntington, WV 25701 - 304.529.6253

Do Not Hesitate To Give Us A Call, In Case, You Have Difficulty Operating This Machine!

We're Here To Help! ~ 304.529.6253