



# POPCORN MACHINE INSTRUCTIONS

A to Z RENTALS & SPECIAL EVENTS - 826 7TH AVE - HUNTINGTON, WV 25701 - 304.529.6253

## THE CONTROLS:

- a) Warming Light Switch: Turns on the heat lamp for better lighting and to keep the popcorn nice and warm.
- b) Kettle Motor Switch: Turns on the motor which drives the kettle agitator shaft, inside of the kettle.
- c) Kettle Heat Switch: Turns on the heating element, on the kettle itself.

As you open the popcorn machine doors, the switches are located at the top, as you look inward.

## POPPING INSTRUCTIONS:

- 1) Turn all three (3) switches on, to begin heating the kettle & machine. Give the kettle, at least 3-5 minutes to get started.
- 2) Empty the 'Oil' into the kettle and allow it to melt, Then empty your 'Popcorn & Seasoning' into the kettle. Note that the popcorn packet is portioned into two (2) separate sides.



- 3) Allow the popcorn to pop and dump the kettle out, when popping has ceased - Keep watch over it, so it doesn't become burned. It will make approximately six (6) one ounce servings.
- 4) Repeat popping cycle starting with Step 2. Allow the kettle to cool down before attempting to clean the machine - The kettle is HOT and will burn you!

## CLEANING:

All that is required from you, is to, empty out the catch pan and clean the inside of the machine, free of any remaining kernels and debris. Wash the inside of the machine (glass panels, door, catch pan and bottom) with warm, soapy water.

**Do Not Remove or Disassemble The Kettle!**

**Do Not Immerse Kettle In Water!**

Do Not Hesitate To Give Us A Call, In Case, You Have Difficulty Operating This Machine!

**We're Here To Help! ~ 304.529.6253**