



# SnowCone Machine Instructions

- 1) **PLUG THE MACHINE IN AND START THE MOTOR.**
- 2) **FILL THE GOOSENECK WITH CRUSHED ICE OR ICE CUBES, BROKEN INTO PIECES 3-4 INCHES IN SIZE. A 20 LB BAG OF ICE WILL MAKE APPROX 40-50 6 oz CONES!**
- 3) **FILL TO ABOUT AN INCH OR SO, FROM THE TOP - THE LARGER THE PIECE OF ICE, THE BETTER THE 'SNOW'!**
- 4) **PUSH THE HANDLE DOWNWARD TO PRESS THE ICE AGAINST THE CUTTER HEAD.**
- 5) **DO NOT PUT YOUR FINGERS OR HANDS, INSIDE THE 'GOOSENECK' - YOU WILL GET CUT!**
- 6) **A FIRM AND EVEN PRESSURE IS ALL THAT IS REQUIRED, BUT SOMETIMES, YOU WILL FIND IT BETTER TO RELIEVE THE PRESSURE 2 OR 3 TIMES ON THE WAY DOWN. THIS LETS THE ICE REARRANGE ITSELF AND YOU GET A BETTER 'BITE'.**
- 7) **DO NOT FORCE THE HANDLE TOO MUCH, AS THE MOTOR COULD BE STALLED. WHEN TOO MUCH PRESSURE BECOMES NECESSARY, RELIEVE THE HANDLE AND THEN COME DOWN ON IT AGAIN.**
- 8) **DO NOT APPLY PRESSURE ON HANDLE UNTIL THE MOTOR IS UP TO SPEED! TOO MUCH PRESSURE ON THE 'PUSH HANDLE' WILL MAKE THE ICE COME OUT TOO COARSE - TOO LITTLE PRESSURE MAKES THE ICE MUSHY.**
- 9) **DURING NORMAL MACHINE OPERATION, THE MOTOR GETS WARM - A SURFACE TEMPERATURE OF 150 DEGREES FAHRENHEIT IS NORMAL.**

**DO NOT ALLOW ANY OBJECTS (METAL, WOOD, PLASTIC, ETC) TO GET DOWN INTO THE 'GOOSENECK' OR YOU WILL RUIN THE BLADES. THE BLADES ARE MADE OF TEMPERED STEEL AND SHOULD LAST A FULL SEASON WITHOUT REPLACEMENT.**

**A to Z RENTALS & SOCIAL EVENTS - 826 SEVENTH AVE - HUNTINGTON, WV 25701  
304.529.6253 - ONLINE @ [www.azrentwv.com](http://www.azrentwv.com)**

A to Z RENTALS & SPECIAL EVENTS IS NOT RESPONSIBLE FOR ANY INCIDENT, INJURY OR ACCIDENT CAUSED FROM THE MISUSE OF THIS RENTAL EQUIPMENT. PLEASE READ THE INSTRUCTION MANUAL BEFORE USING THIS MACHINE. GIVE US A CALL IF YOU EXPERIENCE DIFFICULTIES IN OPERATING THIS MACHINE.